




Parts:
Letters (R,O,C,K,Y)
RAILWAY Sign
Smoke
Supports (2)
Train
Backdrop
Logo Background
Easel
Left tree
Right tree
Bolts (12)

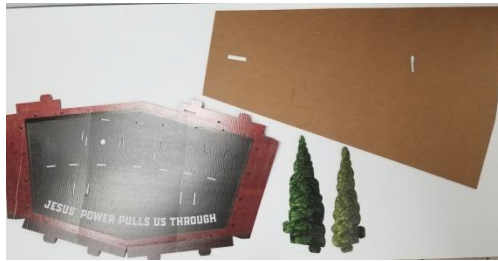

1
Fold *Easel* and lock die wings down. The bottom can be torn at the perforated line for display to hang from the top holes.



2
Use 4 *Bolts* to attach the *Backdrop* to the *Easel*.



3
Arrange *Logo background* facing backwards and use 3 *Bolts* to fasten one side (3). Wrap *Logo background* around front of display (a) and fasten the other side with 3 more *Bolts* (b).




Slide 7 tabs on *Logo background* into *Backdrop* slits.




Fold *Letters* and slide tabs into slots on *Logo background*.




6
Use 2 *Bolts* to attach the *Supports* to the back of the *RAILWAY Sign* (6 & a). The *Supports* have tabs that slide into slots of the *Logo background* (b & c).

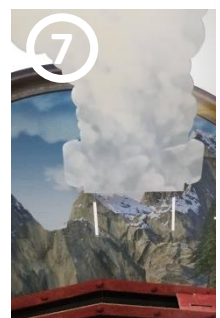

7
Take *Smoke* and slide tabs into slits on *Backdrop*. The *Smoke* should be rounded.

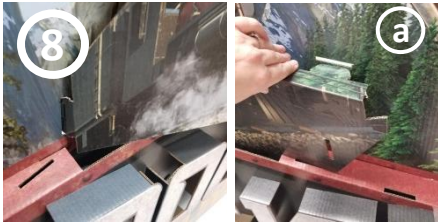

Take tab on left side of *Train* and slide tab into *Backdrop* (8). On right side of *Train* there are 2 tabs that lock into the *Backdrop* and *Logo background*. The *Train* will be at an angle.

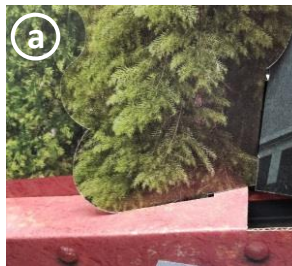

The *Left tree* has 2 tabs. One goes into the top of the *Logo background*. The other tab shares the *Train* slot on the *Backdrop*.



The *Right tree* has 2 tabs. One goes into the top of the *Logo background*. The other tab locks into the *Train*.



**ASSEMBLED ROCKY RAILWAY
LOGO DISPLAY**