

Set up the *easel* by folding the sides 90° and securing sides with locking wing tabs. Fold the top 2 flaps down so they overlap.



Attach the *mountain base* to the easel with 4 bolts. The lowest hole in the *easel* remains unused in this step.



Attach the angled *support bracket* with one bolt to the lowest hole on the *easel*. This bracket will be finished in a later step.



Attach the *letter backdrop* to the *mountain base* with two upper bolts.



Insert the third bolt in the center of the *letter backdrop* to connect it to the *support bracket* underneath.



Connect the "MONUMENTAL" *letters* by folding the side panels 90° and pushing the lock tabs into the corresponding slots on the *letter backdrop*.



Repeat the previous steps to place the remaining letters onto the background.



Attach the *mountain top* to the *mountain base* by folding the side panels 30° and pressing 3 locks into the slots.



Place the *cactus* by bending the seam in the middle and pushing 2 locks into the slots. Repeat for the *cactus* on the opposite side.



Place the completed display on an even surface, or tear off the bottom portion of the easel and hang the display from the provided hanger holes.